

User and installation manual for SL2 Sound Bar

This Bluetooth Audio system has been designed exclusively for use with the SL2 and SL2-C sauna control systems. Do not attempt to connect to any other control system. Record the product serial number, found on the back of the sound bar in the space designated on the back of this document and save for future reference.

Mounting SL2 Sound Bar

- It is recommended that you mount the sound bar off the sauna floor. Attach the wooden cleat as shown in Diagram B with the bevel facing up, using the 2" Torx bit screws. The best sound will be achieved if the sound bar is mounted in the center of the wall. You may want to experiment with locations before securing the wall cleat.

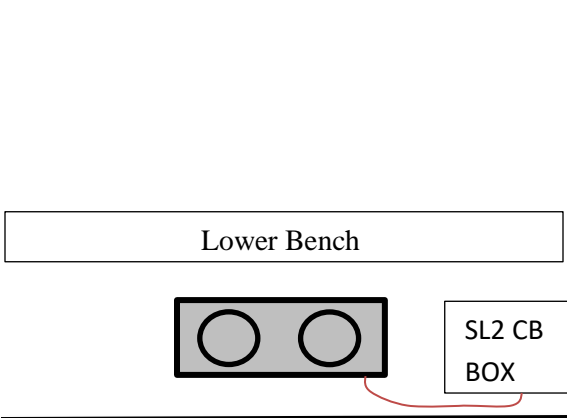


Diagram A


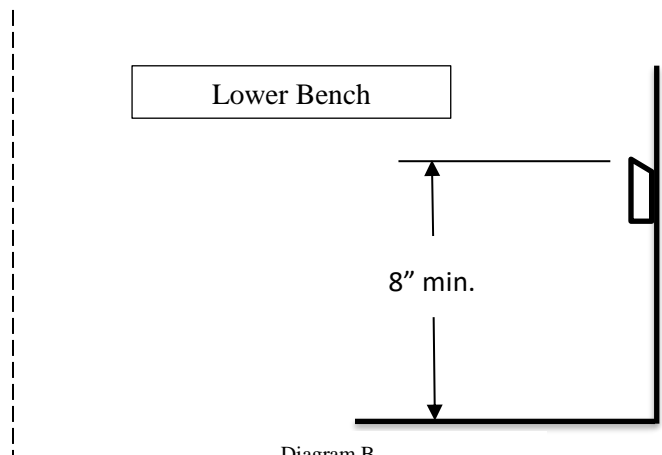


Diagram B

- Hang the SL2 sound bar on the wall cleat. (mating cleat is located on the back of the sound bar.)

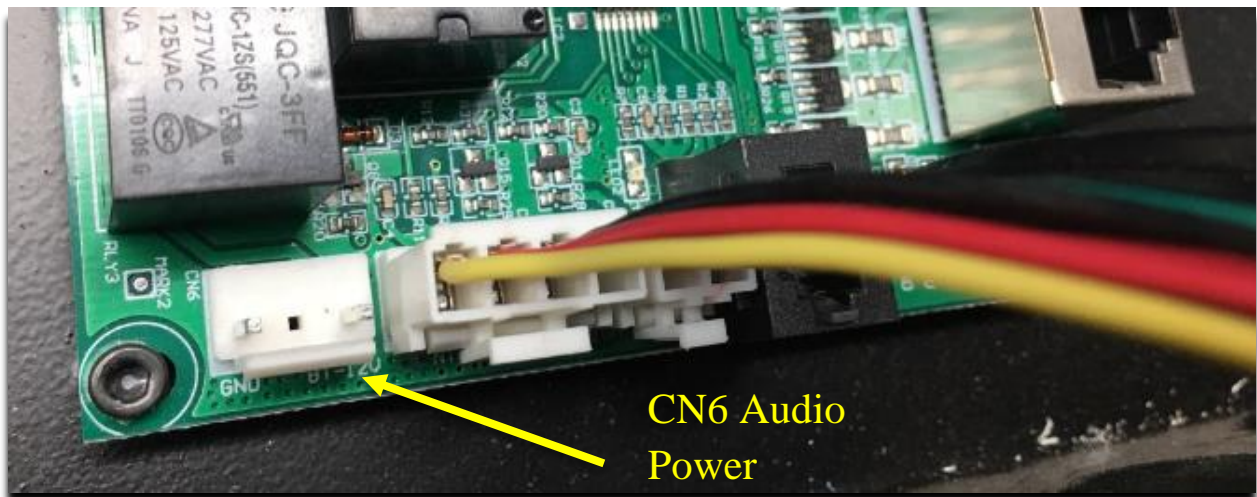

- Connect the sound bar power cord to the "CN6" port, located inside the SL2 or SL2-C contactor box.
-

Using your SL2 Sound Bar

- Touch the Bluetooth button on your SL2 or SL2-C control to activate power to the SL2 Sound Bar.
 - A confirmation tone will be heard on your sound bar speakers when power is applied.

Bluetooth Activation
Button



- Locate “Bluetooth” in your smart device settings. Find and select “**TyloHelo Audio**”.
 - You will hear a confirmation beep when pairing is complete.
- Open your favorite music source App and use the volume keys on your smart device to adjust volume on the SL2 Sound Bar. All control functions are through your smart device and music App.

WARRANTY

TyloHelo Inc. will warranty the SL2 Sound Bar for a period of one (1) year from date of purchase. Warranty may include repair or replacement of any/all components, at TyloHelo’s discretion.

Contact TyloHelo Technical Support Team for questions regarding the use of the SL2 Sound Bar or to file a warranty claim. 1-800-363-0251 or at techsupport@tyloheloinc.com

Date of Purchase: _____ Place of Purchase: _____

Record Serial Number Here