
2021-06-08

Door Contact Steam Enclosure Vista




Installation instruction

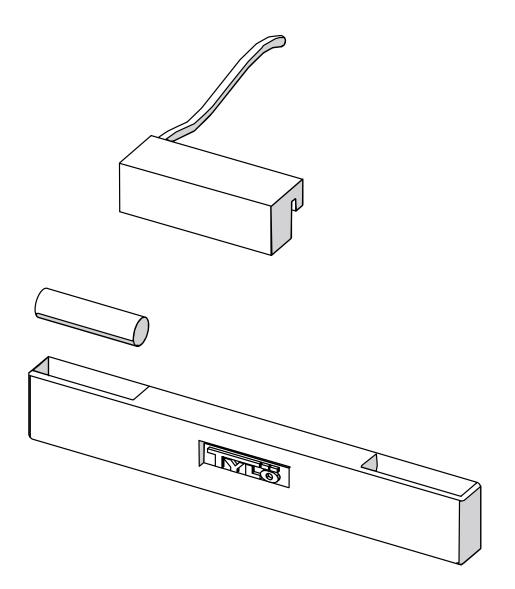


2900 3025

Instalation of door switch to Steam enclosure Vista

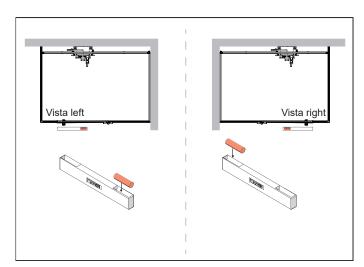


Step 1

Push down the magnet in the groove. Note, different sides depending on Vista Model.

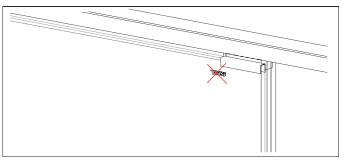


Step 2 Take away the Tylö Logo on the door

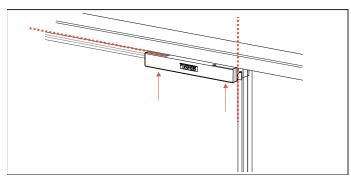


Step 3

Fasten the magnet holder on the door, push it up against the ceiling profile

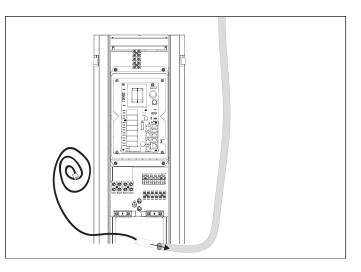


Step 4


Push the sensor trough the flex hose inside the column

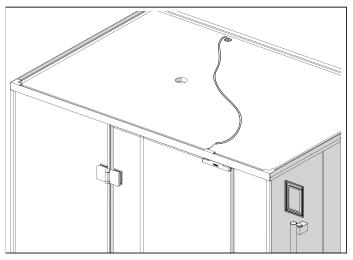

Step 5 Cable on the ceiling

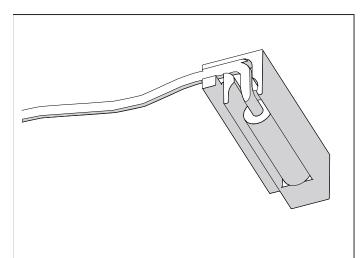


Step 6 Click in the sensor in the holder and fasten the cable in the groove.

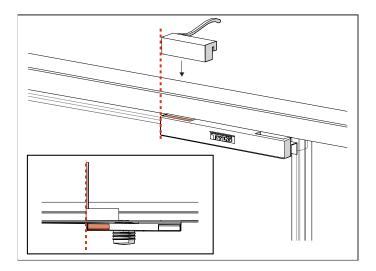


Step 7

Push down the sensor holder in the groove in the ceiling profile, align it with the magnet holder on the door. Same side as the magnet.

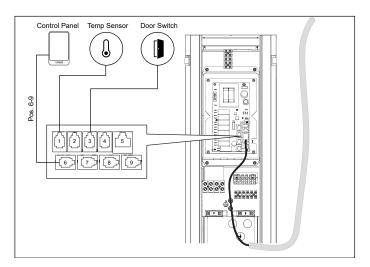

Step 8

Connect the cable in the column to the RJ10 contact #3.

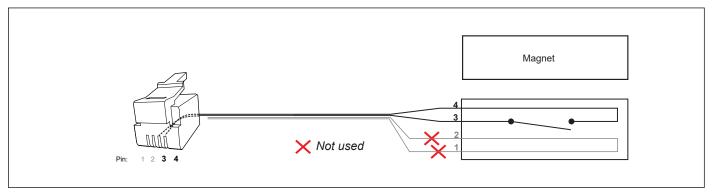

Connection - Door Contact RJ10



For other languages please contact marketing@tylohelo.com